

lightmaXX

PLATINUM LINE



Bedienungsanleitung

 
Seite: 1-3




User Manual

Page: 4 - 6


STAR SPHERE 6 RGBAWP
LIG0010611-000

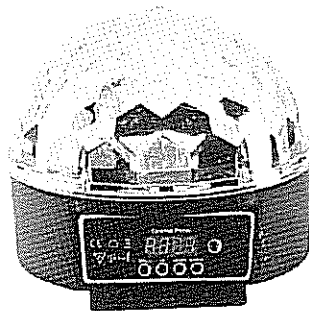

 Lieber Kunde,
vielen Dank das Sie sich für ein Produkt von LightmaXX entschieden haben. In der
folgenden Anleitung erhalten Sie wichtige Informationen über dieses Produkt sowie
deren Eigenschaften und Funktionen.

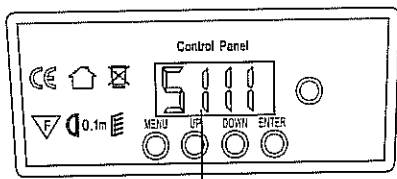


LED DISPLAY & STATUSANZEIGE

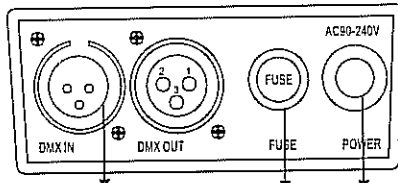 

DMX Ein- & Ausgang Sicherung Netzanschluß

 Fernbedienung:

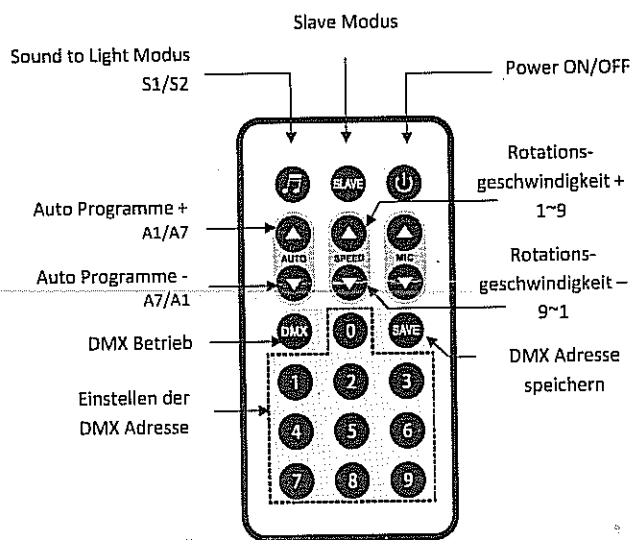

Funktionen

Mode	Funktion	Motor Geschwindigkeit	Effect
A1	Automatic Play	1-9	Farbe Rot/Gelb/Pink aktiv
A2			Farbe Grün/Rot/Gelb aktiv
A3			Farbe Blau/Weiß aktiv
A4			3 Farben Wechselmodus aktiv
A5			7 Farben Wechselmodus aktiv
A6			Ständig wechselnder Farbmodus, kein Strobe

A7			Strobe Modus
S1	Sound Activated	0-9	Sound to Light aktiv
S2			Sound to Light aktiv, Kein Sound, Autobetrieb startet
A001	DMX	001-511	DMX Startadresse
SLAV	Slave mode		Master/Slave Modus


DMX512 setting functions

Kanal	Funktion	Wert	Effect
1	Program Wahl	0-19	Blackout
		20-39	A1, Farbe Rot/Gelb/Pink aktiv
		40-59	A2, Farbe Grün/Rot/Gelb aktiv
		60-79	A3, Farbe Blau/Weiß aktiv
		80-99	A4, 3 Farben Wechselmodus aktiv
		100-119	A5, 7 Farben Wechselmodus aktiv
		120-139	A6 Ständig wechselnder Farbmodus, kein Strobe
		140-159	A7 Strobe Modus
		160-179	S1 Sound to Light aktiv
		180-199	S2 Sound to Light aktiv, Kein Sound, Autobetrieb startet
		200-255	CH2-CH6 aktiviert
2	Strobe	0-9	Kein strobe
		10-255	Strobe, Geschwindigkeit von schnell zu langsam
3	Red/Red&Yellow /Red&Pink	0	Blackout
		1-255	Helligkeit der Farbe von 0 – 100 %
4	Green/Red&Green /Green&Yellow	0	Blackout
		1-255	Helligkeit der Farbe von 0 – 100 %
5	Blue/Blue&White	0	Blackout
		1-255	Helligkeit der Farbe von 0 – 100 %
6	Motor	0-127	Statische Position
		128-255	Wechsel hin und her mit Motordrehzahl 9

www.musicstore.de


USER MANUAL

 Front panel

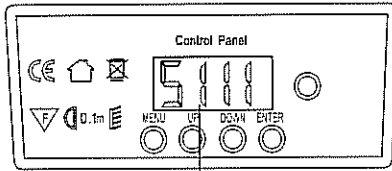

LED function setting

 Rear panel

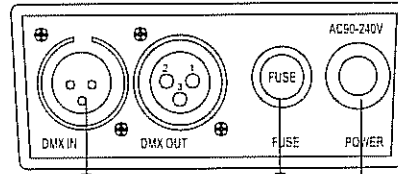

DMX linking jack

Fuse

Power

 
Wireless Remote (IR)

Slave mode

Set the DMX address using the remote controller: press "DMX" button, then press number buttons to set the DMX address. For example, to set the address as 8, you should press "DMX" button, then press "0", "0", "8". Press "SAVE" to save the settings. If the input value is more than 511, the DMX address will reset to 1.

Sound active mode
S1/S2

Power ON/OFF

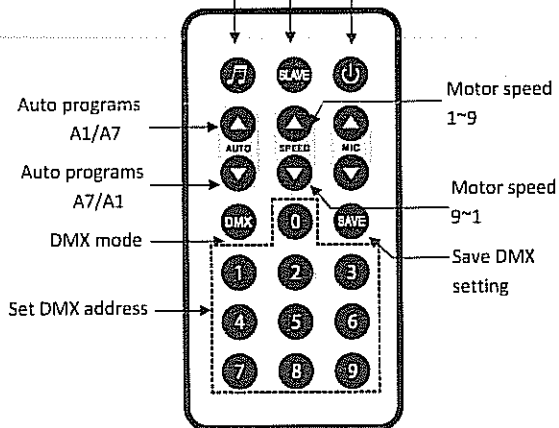

Function

Mode	Function	Motor speed	Effect
A1	Automatic Play	1-9	Red/Red&Yellow/Red&Pink always ON, motor speed from slow to fast
A2			Green/Red&Green/Green&Yellow always ON, motor speed from slow to fast
A3			Blue/Blue&White always ON, motor speed from slow to fast
A4			Each 3 colors random running, motor speed from slow to fast
A5			7 colors random transformation, motor speed from slow to fast
A6			Gradually change mode, no strobe
A7			Strobe mode
S1	Sound Activated	0-9	Sound activating color change and strobe
S2			Sound activating color change and strobe. If no sound, run automatically.
A001	DMX	001-511	With DMX signal input, the right corner of "A" will flash.
SLAV	Slave mode		With signal input, the right corner of "S" will flash.

DMX512 setting functions

Channel	Function	Value	Effect
1	Program Selection	0-19	Blackout
		20-39	A1, Red/Red&Yellow/Red&Pink always ON, motor speed from slow to fast
		40-59	A2, Green/Red&Green/Green&Yellow always ON, motor speed from slow to fast
		60-79	A3, Blue/Blue&White always ON, motor speed from slow to fast
		80-99	A4, Each 3 colors random running, motor speed from slow to fast
		100-119	A5, 7 colors random transformation, motor speed from slow to fast
		120-139	A6 Gradually change mode, no strobe, motor speed from slow to fast
		140-159	A7 Strobe mode, motor speed from slow to fast
		160-179	S1 Sound Activated 1
		180-199	S2 Sound Activated 2
200-255	CH2-CH6 are valid		
2	Strobe	0-9	No strobe
		10-255	Strobe, speed from fast to slow
3	Red/Red&Yellow/Red&Pink	0	Blackout
		1-255	Brightness from minimum to maximum

4	Green/ Red&Green /Green& Yellow	0	Blackout
		1-255	Brightness from minimum to maximum
5	Blue/ Blue&White	0	Blackout
		1-255	Brightness from minimum to maximum
6	Motor	0-127	Static position
		128-255	Swing back and forth with motor speed 9

LED panel operations:

Turned the unit on, the LED screen will display rSt (reset) to enter the main menu. Press MENU and press UP or DOWN to select the submenu, and then press ENTER to save the current running mode.

Digital keys from left to right are: MENU, UP, DOWN, ENTER.

www.musicstore.de