

USER MANUAL



 
ZOOM PAR à LED

RGBWA+UV 6in1

Please read over this manual before operation the light

LED Display Par Light

1. The Introduction of LED display panel:



- A. Menu
- B. UP
- C. Down
- D. Enter
- E. LED Display Window

Press **A** button, there will be eight different effects.

The first two letters stands for functions (refer to Diagram II)

The last two letters stands for DMX address, or speed,.

You can modify it with **B** or **C** button. And press **D** button for confirmation.

2. Function of LED Display Window (press button D to confirm all the function)

No	Display	Function
1	A001	CH11 Add Code, with B. C button to change the code(001-512)
1	D001	CH7 Add Code, with B. C button to change the code(001-512)
2	CC 00	Color Pulse Speed, adjustable by B or C button(01-99)
3	CP 00	Color Change Speed, adjustable by B or C button(01-99)
4	DE 00	Color Mixed Change, changing speed adjustable by B or C button(01-99)
5	BEB1	Music activated
6	R220	Red, with B. C button to change the color(000-255)
7	G220	Green with B. C button to change the color(000-255)
8	B220	Blue, with B. C button to change the color(000-255)
8	W220	White, with B. C button to change the color(000-255)
8	Y220	Yellow, with B. C button to change the color(000-255)
8	P 220	UV, with B. C button to change the color(000-255)
10	t000	Motor location , with B. C button to change the location(000-255)

3. Explanation of DMX512 Channel

CH	Function	Explanation
----	----------	-------------

CH1	General Dimmer	R, G, B, W, Y, P linear 0%-100% dimmer, from dark to bright
CH2	General Strobe	R, G, B, W, Y, P strobe, from slow to fast
CH3	Control Mode selection	0-50 CH9 control, 51-100 color pulse , 101-150 gradual change, 151-200 slow change, 201-255 sound control
CH4	Function of speed	Function of speed , from slow to fast
CH5	R Dimmer	Red(1-255, dimmer, from dark to bright)
CH6	G Dimmer	Green (1-255, dimmer, from dark to bright)
CH7	B Dimmer	Blue (1-255, dimmer, from dark to bright)
CH8	W Dimmer	White (1-255, dimmer, from dark to bright)
CH9	Y Dimmer	Yellow (1-255, dimmer, from dark to bright)
CH10	P Dimmer	UV(1-255, dimmer, from dark to bright)
CH11	Zoom	Change in focal length

3 . DMX512 7 CH Explanation

CH	Function	Explanation
CH1	R Dimmer	Red(1-255, dimmer, from dark to bright)
CH2	G Dimmer	Green (1-255, dimmer, from dark to bright)
CH3	B Dimmer	Blue (1-255, dimmer, from dark to bright)
CH4	W Dimmer	White (1-255, dimmer, from dark to bright)
CH5	Y Dimmer	Yellow (1-255, dimmer, from dark to bright)
CH6	P Dimmer	UV(1-255, dimmer, from dark to bright)
CH7	Zoom	Change in focal length

4. Feature

easy to operate, humanization design, no flicker while dimmer; Stable quality. Applicable to photograph, camera, and TV station as well.